



DESIGN CP	DRAWN BY CP	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED KE	APPROVED [Signature]	DRAWING NO. DSI 9138	REV. A SHEET 1 OF 1
DATE 99.03.02		TITLE AS350/355 STEP INSTALLATION	SCALE NTS
A	99.03.02	NEW ISSUE	

# DART SERVICE INSTRUCTION

AMEND INSTALLATION DRAWING D350-591 REV. D


CANADIAN STA: SH92-6

US FAA STC: SH967NE

FOR D350-591-115 SHORT STEP – LO-SKID INSTALLATION:

REPLACE D2362-3 SUPPORT BRACKET WITH D2362-5 SUPPORT BRACKET.  
INSTALL AS SHOWN BELOW:

## SECTION A-A OF D350-591 REV. D PG. 5: STEP SUPPORT FOR D350-591-115 ONLY

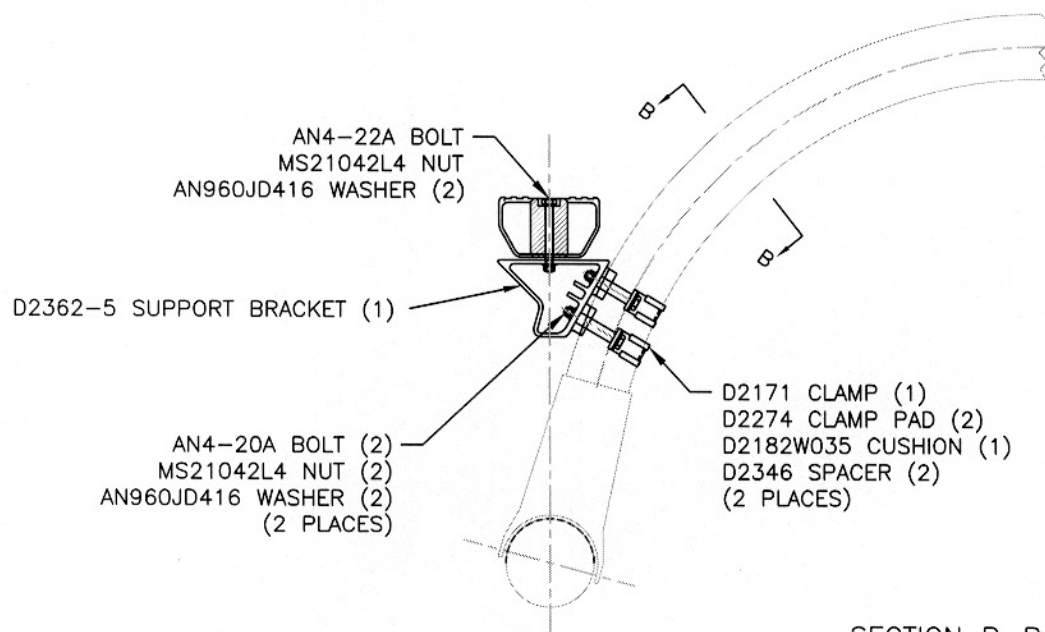

## SECTION B-B: STEP SUPPORT

